Tenter Weg 2-8 ● 42897 Remscheid ● Germany Fon +49 (0) 2191 - 9672 - 0 ● Fax - 40 www.honsberg.com ● info@honsberg.com

## HONSBERG

**FLEX-FIN** 

#### **Product Information**

# Flow Transmitter / Switch FLEX-FIN



- Flow switch / transmitter for small flows
- Combination with temperature switch or transmitter possible
- No moving parts in the medium being measured
- Only one medium-contact material
- Simple to use
- Low pressure loss
- Various nominal widths
- Short response times for a calorimetric sensor
- Linearised and temperature compensated
- Simultaneous measurement of flow and temperature is possible

#### **Characteristics**

The FLEX-FIN flow sensor monitors fluid media. Its compact form combines the measurement tube and converter / counter which, depending on the model, trigger an adjustable limit value with transistor output or an analog output (4..20 mA or 0..10 V) or both. In addition, the limit switch can alternatively be replaced by a frequency output.

The converter / counter record two process parameters: the flow speed of the medium and its temperature. Both parameters can be assigned to the analog output or to the switching output.

The following output combinations are available:

Flow		Temperature	
Analog	Switching output	Analog	Switching output
•			
	•		
•	•		
•			•
	•	•	

The switching output is a "push-pull" transistor output and provides PNP and NPN inputs equally. It can be offered as a minimum switch or a maximum switch, or as a frequency output.

#### **Technical data**

Sensor	calorimetric measurement principle	
Nominal widths	DN 610	
Process connection	smooth tube for crimp connector or hose connection	
Metering ranges (for water)	6 mm tube: (0.001) 0.012 l/min 8 mm tube: 0.0255 l/min 10 mm tube: 0.0510 l/min Special ranges available on request	
Measurement accuracy	±3 % of the measured value (H <sub>2</sub> O dist.)	
Repeatability	±1 % of the measured value (H <sub>2</sub> O dist.)	
Temperature gradient	4 K/s	
Pressure resistance	PN 10 bar	
Medium temperature	070 °C (-20+100 °C available on request)	
Operating temperature	-20+70 °C (electronics)	
Storage temperature	-20+80 °C	
Pressure loss	max. 0.3 bar at max. flow	
Supply voltage	24 V DC ±10 %	
Current consumption	max. 100 mA	
Switching output	transistor output "push-pull"	
Contouring output	(resistant to short circuits and polarity reversal) Iout = 100 mA max.	
Switching	(resistant to short circuits and polarity reversal) I <sub>out</sub> = 100 mA max. flow 1 % of full scale value	
Switching hysteresis	(resistant to short circuits and polarity reversal)  I <sub>out</sub> = 100 mA max.  flow 1 % of full scale value Temperature: approx. 1 °C	
Switching	(resistant to short circuits and polarity reversal) I <sub>out</sub> = 100 mA max. flow 1 % of full scale value	
Switching hysteresis Display (only with	(resistant to short circuits and polarity reversal)  I <sub>out</sub> = 100 mA max.  flow 1 % of full scale value Temperature: approx. 1 °C  yellow LED (On = Normal / Off = Alarm /	
Switching hysteresis Display (only with switching output)	(resistant to short circuits and polarity reversal)  I <sub>out</sub> = 100 mA max.  flow 1 % of full scale value Temperature: approx. 1 °C  yellow LED (On = Normal / Off = Alarm / rapid flashing = Programming)	
Switching hysteresis Display (only with switching output)	(resistant to short circuits and polarity reversal)  I <sub>out</sub> = 100 mA max.  flow 1 % of full scale value Temperature: approx. 1 °C  yellow LED (On = Normal / Off = Alarm / rapid flashing = Programming) by means of magnet  420 mA / Load 500 Ohm max.	
Switching hysteresis Display (only with switching output)  Adjustment Analog output	(resistant to short circuits and polarity reversal)  I <sub>out</sub> = 100 mA max.  flow 1 % of full scale value Temperature: approx. 1 °C  yellow LED (On = Normal / Off = Alarm / rapid flashing = Programming)  by means of magnet  420 mA / Load 500 Ohm max. or 010 V / Load min. 1 kOhm	
Switching hysteresis Display (only with switching output)  Adjustment Analog output  Ingress protection Electrical	(resistant to short circuits and polarity reversal)  I <sub>out</sub> = 100 mA max.  flow 1 % of full scale value Temperature: approx. 1 °C  yellow LED (On = Normal / Off = Alarm / rapid flashing = Programming)  by means of magnet  420 mA / Load 500 Ohm max. or 010 V / Load min. 1 kOhm  IP 65	
Switching hysteresis Display (only with switching output)  Adjustment Analog output  Ingress protection Electrical connection Materials	(resistant to short circuits and polarity reversal)  I <sub>out</sub> = 100 mA max.  flow 1 % of full scale value Temperature: approx. 1 °C  yellow LED (On = Normal / Off = Alarm / rapid flashing = Programming)  by means of magnet  420 mA / Load 500 Ohm max. or 010 V / Load min. 1 kOhm  IP 65  for round plug connector M12x1, 4-pole	
Switching hysteresis Display (only with switching output)  Adjustment Analog output  Ingress protection Electrical connection Materials medium-contact Materials, non-	(resistant to short circuits and polarity reversal)  I <sub>out</sub> = 100 mA max.  flow 1 % of full scale value Temperature: approx. 1 °C  yellow LED (On = Normal / Off = Alarm / rapid flashing = Programming)  by means of magnet  420 mA / Load 500 Ohm max. or 010 V / Load min. 1 kOhm  IP 65  for round plug connector M12x1, 4-pole  stainless steel 1.4571	
Switching hysteresis Display (only with switching output)  Adjustment Analog output  Ingress protection Electrical connection Materials medium-contact Materials, non- medium-contact	(resistant to short circuits and polarity reversal)  I <sub>out</sub> = 100 mA max.  flow 1 % of full scale value Temperature: approx. 1 °C  yellow LED (On = Normal / Off = Alarm / rapid flashing = Programming)  by means of magnet  420 mA / Load 500 Ohm max. or 010 V / Load min. 1 kOhm  IP 65  for round plug connector M12x1, 4-pole  stainless steel 1.4571  PPS, PA6.6, CW614N	



Professional Instrumentation "MADE IN GERMANY

pi-ho-fka-flex-fin\_e V1.00-00


Tenter Weg 2-8 • 42897 Remscheid • Germany Fon +49 (0) 2191 - 9672 - 0 • Fax - 40 www.honsberg.com • info@honsberg.com

## HONSBERG

#### FLEX-FIN

#### **Product Information**

#### Wiring

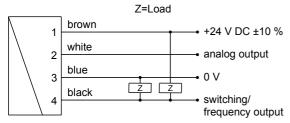


Connection example: PNP NPN




Before the electrical installation, it must be ensured that the supply voltage corresponds with the data sheet.

It is recommended to use shielded wiring.

#### **Dimensions**

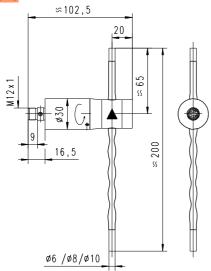

#### Gooseneck option

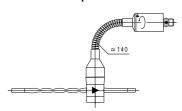

A gooseneck (optional) between the electronics head and the primary sensor provides freedom in the orientation of the sensor

### **Handling and operation**

#### Installation

In order to ensure the sensor's maximum insensitivity to interference, the flow should run from bottom to top (best degassing even at the slowest flow speed). Standard crimp connectors, hoses with crush protection, or the crimp connectors provided by HONSBERG can be used for the connection.

The insulation hoses offer the best possible insulation against the surroundings, and must therefore not be removed.

There is a marking on the rear of the housing. The sensor should be fixed there using a sheet metal screw. The penetration depth of the screw must not exceed 5 mm.

The piping must not be bent or deformed.

When testing, use only hoses, because the transmitter can no longer be returned if the connection pieces have been crimped.

#### **Programming**

The electronics contain a magnetic contact, with the aid of which different parameters can be programmed. Programming takes place when a magnet clip is applied for a period between 0.5 and 2 seconds to the marking located on the label. If the contact time is longer or shorter than this, no programming takes place (protection against external magnetic fields).





After the programming ("teaching"), the clip can either be left on the device, or removed to protect data.

The device has a yellow LED which flashes during the programming pulse. During operation, the LED serves as a status display for the switching output.

In order to avoid the need to transit to an undesired operating status during "teaching", the device can be provided ex-works with a "teach-offset". The "teach-offset" value is added to the currently measured value before saving (or is subtracted if a negative value is entered).

Example: The switching value is to be set to 70 % of the metering range, because at this flow rate a critical process status is to be notified. However, only 50% can be achieved without danger. In this case, the device would be ordered with a "teach-offset" of +20 %. At 50 % in the process, a switching value of 70 % would then be stored during "teaching".

Normally, programming is used to set the limit switch. However, if desired, other parameters such as the end value of the analog or frequency output may also be set.




Tenter Weg 2-8 • 42897 Remscheid • Germany Fon +49 (0) 2191 - 9672 - 0 • Fax - 40 www.honsberg.com • info@honsberg.com


#### **Product Information**

The limit switch can be used to monitor minima or maxima.

With a minimum-switch, falling below the limit value causes a switchover to the alarm state. Return to the normal state occurs when the limit value plus the set hysteresis is again exceeded.

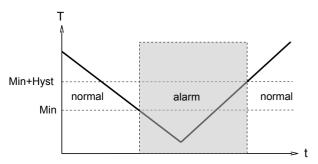


With a maximum-switch, exceeding the limit value causes a switchover to the alarm state. Return to the normal state occurs when the measured value once more falls below the limit value minus the set hysteresis.

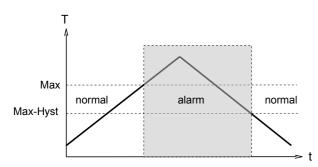

A switchover delay time  $(t_{\mbox{\scriptsize DS}})$  can be applied to the switchover to the alarm state. Equally, one switch-back delay time ( $t_{\text{DR}}$ ) of several can be applied to switching back to the normal state.


In the normal state the integrated LED is on, in the alarm state it is off, and this corresponds to its status when there is no supply volta-

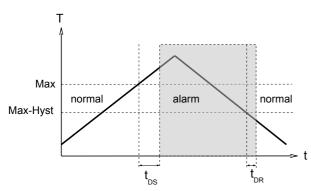

In the non-inverted (standard) model, while in the normal state the switching output is at the level of the supply voltage; in the alarm state it is at 0 V, so that a wire break would also display as an alarm state at the signal receiver. Optionally, an inverted switching output can also be provided, i.e. in the normal state the output is at 0 V, and in the alarm state it is at the level of the supply voltage.



FLEX-FIN

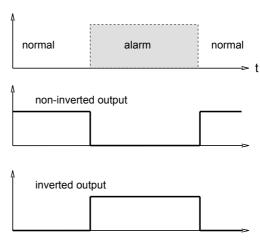

A Power-On delay function (ordered as a separate option) makes it possible to maintain the switching output in the normal state for a defined period after application of the supply voltage.

pi-ho-fka-flex-fin\_e V1.00-00

Tenter Weg 2-8 ◆ 42897 Remscheid ◆ Germany Fon +49 (0) 2191 - 9672 - 0 ◆ Fax - 40 www.honsberg.com ◆ info@honsberg.com



### **Product Information**

Ordering code

### FLEX-FIN

	1	2. 3. 4. 5. 6. 7. 8. 9.	Special measuring range for flow:	
FLE	EX-FIN	R	Metering range start value	, I/min
<b>O=</b> 0	ption		Metering range end value	
1. Connection size			Metering range end value	
· ·	006 tube Ø 6 mm		Filter time (standard = 0.5 s)	s
	008	in mm / 0.5 mm 8 mm	Possible values:	
	010	wall thickness 10 mm	OFF/0.2/0.5/1/2/4/8/16/32 s.	
2.	Process cor	1		
		tube	Special measuring range for	
3.			temperature:	
<u> </u>	K	stainless steel 1.4571	Maximum 100 °C (standard = 70 °C)	°C
		Hastelloy®		·
4.	1.10010109		Minimum -20 °C (standard = 0 °C)	°C
	F	flow rate to analog output		
	Т	temperature to analog output	Special range for analog output:	
5.	Temperature to arrang earper		<= Metering range (standard = mete-	cm/s
	1	current output 420 mA	ring range)	°C
	U	voltage output 010 V		
6.	9		Special range for frequency output:	
	T switching output push-pull M switching output NPN (open collector)		<= Metering range (standard =	cm/s
			Metering range)	°C
7.	3 2 4 4 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2			
	F	flow to switching output	End frequency (max. 2000 Hz)	Hz
	Т	temperature to switching output		
8. Function for switching output			Switching delay	s
	L minimum switch		(from Normal to Alarm)	
	Н О	maximum switch		
	R	frequency output	Switchback delay	s
9. Switching output level			(from Alarm to Normal)	
	0	standard output		
	I	inverted output	Power-On delay (099 s)	S
		· .	(time after power on, during which the	
			outputs are not actuated)	
			Switching output fixed	cm/s °C
			Special hysteresis	——————————————————————————————————————
			(standard = 1 % of full scale value)	
			Gooseneck	

**Options** 

#### Accessories

automatically.

- Crimp connector
- Connector / made-up cable
- Device configurator ECI-1
- Cable/round plug connector (KB...) see additional information "Accessories"

If the field is not completed, the standard setting is selected

